


SMARTRACING™ PRODUCTS

A Company Developing Smart Racing
Products Through Engineering

Window Net Mounting Kit - Part No. 032125


Instructions Window Net Mounting Kit

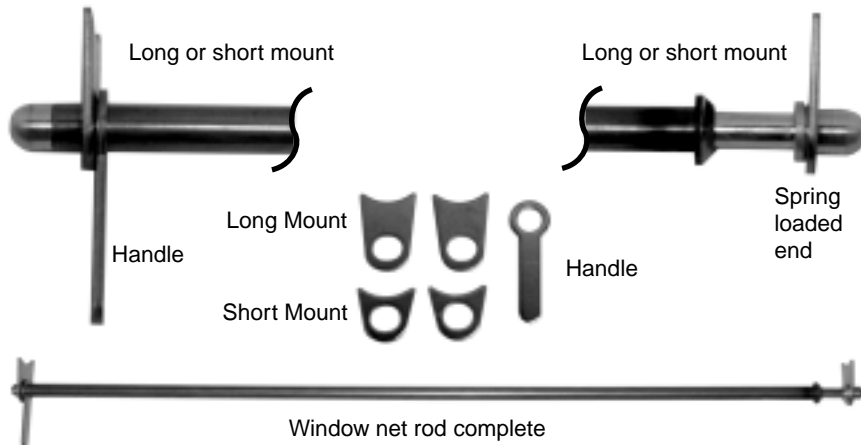

Installation shown requires 2 kits.



Note:
The length of the window net rod may be changed to fit your application. To do this drill out the punch mark at the end without the spring shorten rod and reinstall end and punch tube.

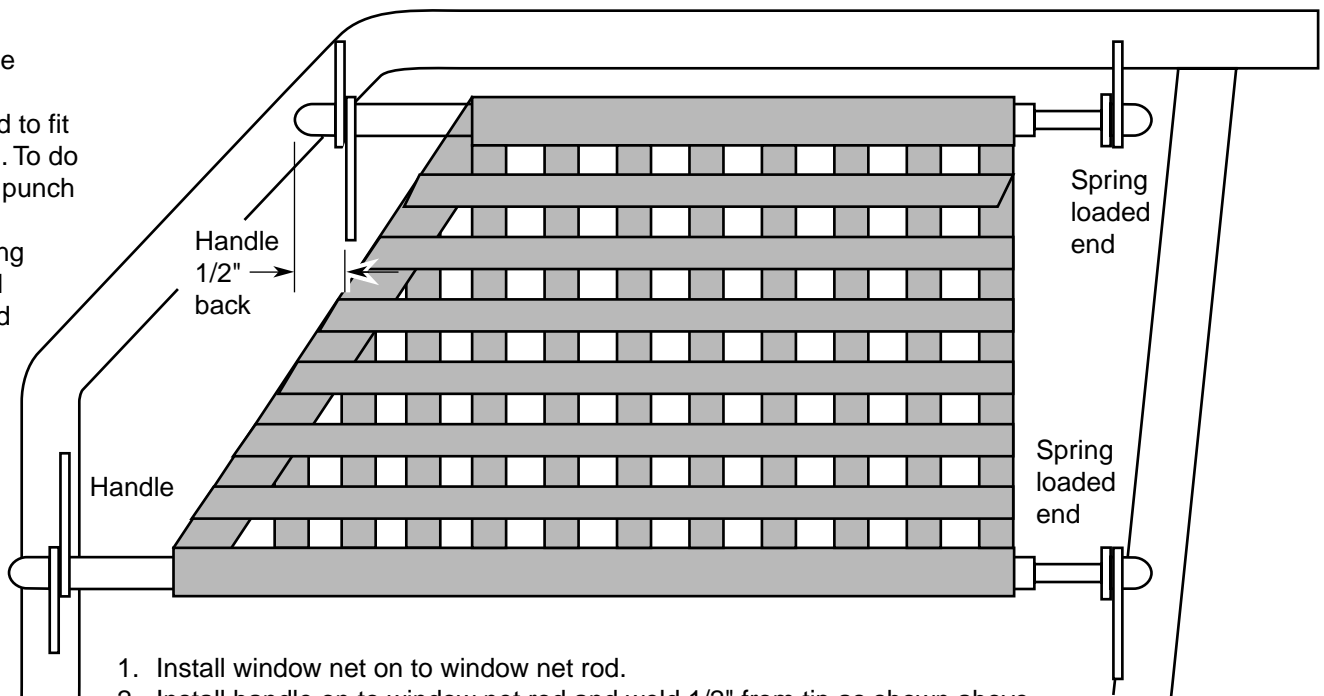

1. Install window net on to window net rod.
2. Install handle on to window net rod and weld 1/2" from tip as shown above.
3. Hold window net in desired location on the upper bar. This will indicate the location of rear mount. Use short or long mount for desired fit. Weld in place on the upper bar.
4. Locate position of front mount by applying slight pressure on handle use long or short mount and weld to the upper bar.
5. Mount lower bar with the same procedure.

Questions or comments please call 408.369.9997 or FAX 408.369.9741
www.smartracingproducts.com